# **OPERATING INSTRUCTIONS FOR RF-DESK**


09.2836D.04276




Important: Read All Instructions Prior to Installation


#### **Function introduction**

Rotate the knob counterclockwise to decrease light intensity from 100% to 1%.

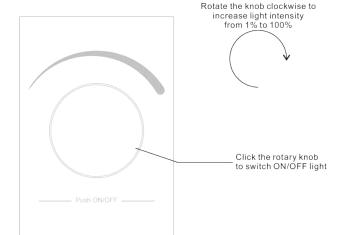

Front side

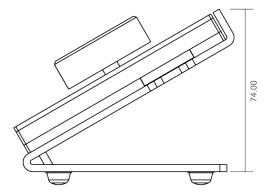

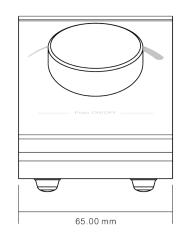

### Product Data


Output Signal	RF signal
Power Supply	3V(CR2025)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	96x65x74mm

- · Rotation sensitive
- · Compatible with all universal series RF receivers
- Radio frequency: 868/869.5/916.5/434MHz
- Control single color
- · Control 1 zone of RF receiver
- · Waterproof grade: Ip20

## Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

## Pair with RF receiver

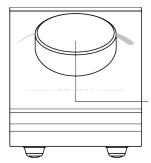

Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.




Step 2:Click the "Learning Key" button on RF receiver to set it into pairing status

• Step 3:Rotate or click the knob, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

#### Installation

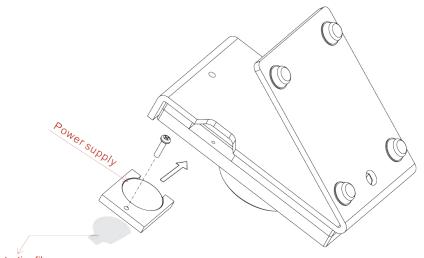





Web: www.outwater.com Phone: 1-800-631-8375