 



Hinge adjustments

COMPACT series


(See inside for adjustments
and installation instructions.)

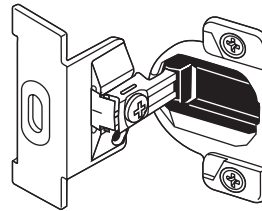

 
COMPACT 33 series
Large overlay

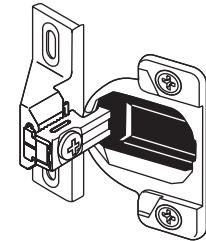

COMPACT 33 series
Small overlay

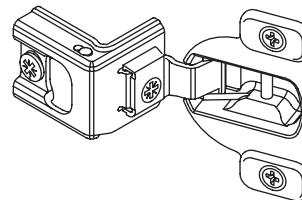 

COMPACT 38C/39C series
Large overlay

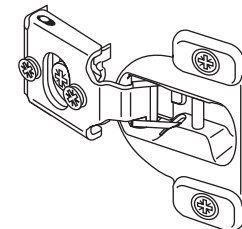 


COMPACT 38N series
Small overlay

Blum, Inc.
7733 Old Plank Rd,
Stanley, NC 28164
toll free 800-438-6788
local 704-827-1345
fax 704-827-0799
internet www.blum.us


COMPACT 33 series

 Side adjustment



Loosen front screw,
position door, tighten
screw.
Range = 1/8" (3mm)

 Height adjustment




Loosen screw(s) on
the mounting plate.
Adjust door to
position and tighten
screw(s).
Range = 9/32" (7mm)

Door removal

Loosen side adj. screw.
Slide hinge off mounting
plate towards center of
cabinet.





Door installation

 To reinstall reverse
procedure, tighten
screws on all hinges.




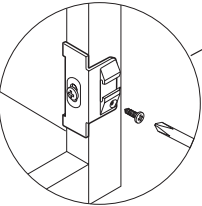


Note:
Before finishing hinge
installation, place set screw in
hinge plate to prevent hinge
plate movement.
(1 3/8" or greater overlays only.)

    Large overlay

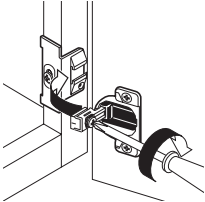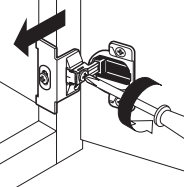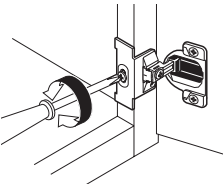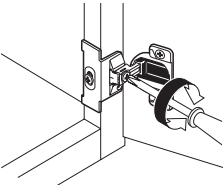


Small overlay

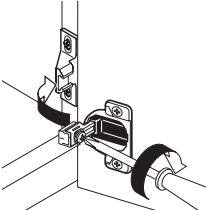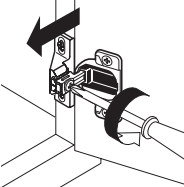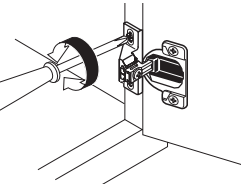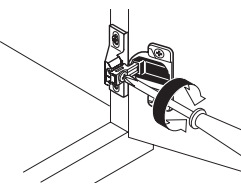    


COMPACT 38C/39C & 38N series

 Side adjustment




Turn front screw
counter-clockwise to
increase door overlay,
clockwise to decrease.
Range = 1/8" (3mm)

 Height adjustment






Loosen center screw.
Adjust door to position
and tighten screw.
Range = 1/4" (6mm)

 Door removal



Turn back screw
counter-clockwise
to increase door gap,
clockwise to decrease.
**Range = -1/32" (1mm)
+ 3/32" (2mm)**

   Large overlay

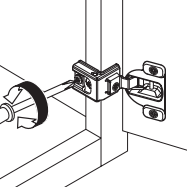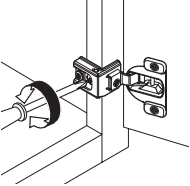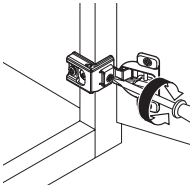

Small overlay

